



# Pickwick Door sizes and Installation Instructions


Just follow the steps explained below. Ideally, if size of pet permits, door should be hung well above ground to allow for obstructions or snow.

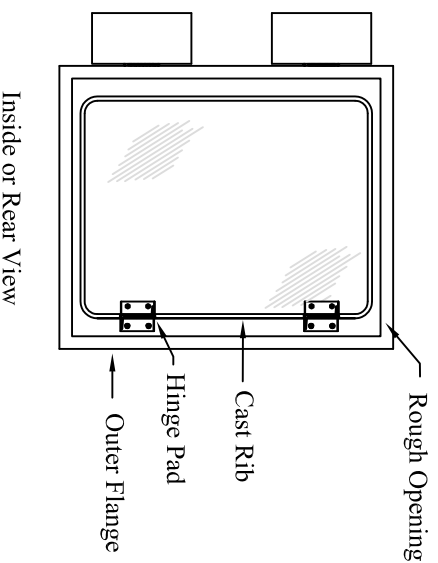

**Step One**  
Cut rough opening to clear Cast Rib and Hinge Pads as shown.

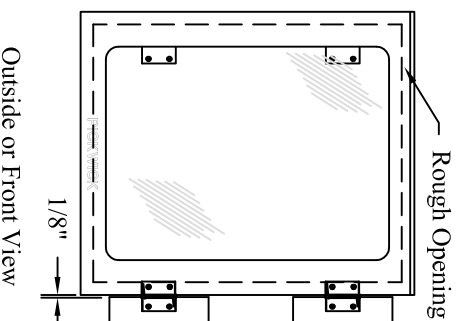

**Step Two**  
Attach shims to door hinges. Allow 1/8" clearance as shown. Equalize door in rough opening. Drill through shims and attach to wall. (additional fasteners not included)  
Drill through shims as required for mounting.

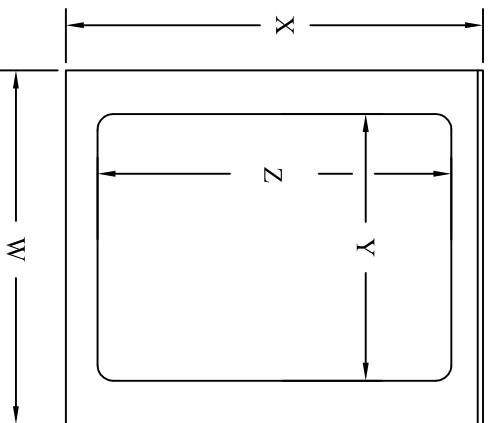

## 5 MODELS TO SUIT YOUR NEEDS

Model	Door Dimensions			
	Outside Door	Inside Door		
	W	X	Y	Z
Model B	13 1/8"	19 1/2"	9 3/8"	16 5/8"
Model A	16 3/4"	19 3/4"	12 5/8"	16 3/4"
Model D	15 7/8"	21 3/4"	11 5/8"	18 3/4"
Model E	15 1/4"	22 1/2"	11"	19 5/8"
Model F	17"	23 1/2"	12 3/4"	20 3/4"
Model C	17 1/2"	29"	13"	26 1/4"

Model	Rough Open Dimensions			
	Width	Height		
	Min.	Max.	Min.	Max.
Model B	11 1/8"	12 5/8"	17 1/2"	19"
Model A	14 1/2"	16 1/4"	17 3/4"	19 1/4"
Model D	13 1/2"	15 3/8"	19 3/4"	21 1/4"
Model E	12 3/4"	14 3/4"	20 5/8"	22"
Model F	14 1/2"	16 1/2"	21 3/4"	23"
Model C	14 3/4"	17"	27 1/8"	28 1/2"